

Elite™ Android Quick Start Guide for Zello



 
For the most up-to-date app settings and configurations, check zello.com/support.




1. Before plugging your Elite™ speaker-microphone (SM) into the Android device, set the configuration to 3 by pressing the rear button for 4 seconds. The SM will then beep twice in quick succession.

2. The SM will beep and flash a red LED a number of times equal to the current configuration.


- If the SM indicates **configuration 3**, don't do anything. After 4 seconds, the SM will beep twice in quick succession indicating it is ready for use.
- If the SM indicates some **configuration other than 3**, press the rear button 3 times. The SM will then beep and flash the LED 3 times as confirmation. After 4 seconds, the SM will beep twice in quick succession indicating it is ready for use.

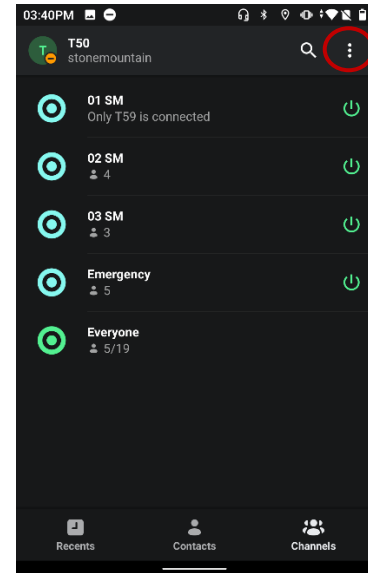

 
3. Plug the SM into the device. Launch Zello and tap then 3 dots in the upper-right corner and select **Options**.

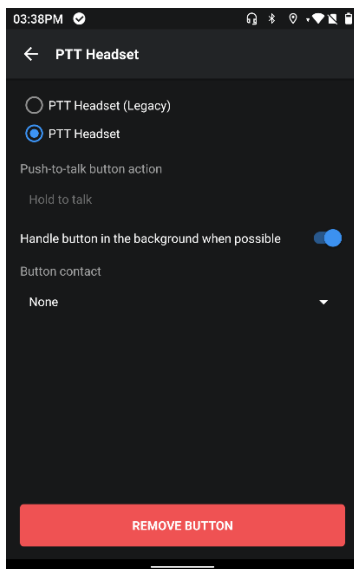

 4. Select **Push-to-talk buttons > PTT Headset**. Choose **PTT Headset** and enable **Handle button in the background when possible**.

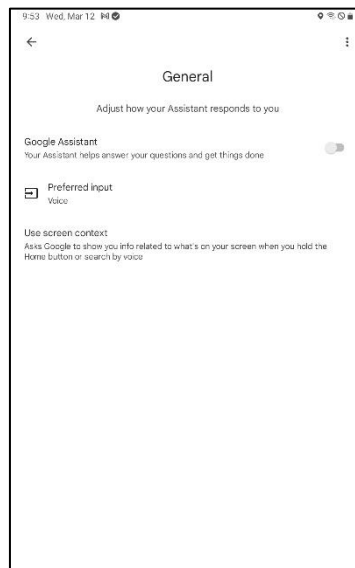

 5. Google Assistant can interfere with Zello and wired accessories, so it should be disabled. In the **Settings** app, select **Google > All Services > Search, Assistant & Voice > Google Assistant > General**, and disable the **Google Assistant** toggle.

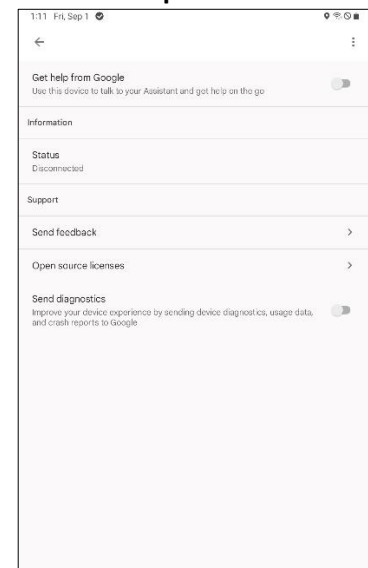

6. Navigate to the previous menu and select **Devices**. Select **Wired headphones** and disable **Get Help From Google**.

Note: This setting may only appear after the SM has been connected for the first time.

Zello For Work Users: This may need to be configured in the administration portal

Innovation... Quality... Passion

Designed, Assembled, Tested and Supported with Pride in the USA, at Stone Mountain we strive to provide our customers with innovative products of the highest quality, reliability and value. We welcome and appreciate your input - Feel free to contact us.