

## TDX309XX-5 | 5 Bay Auto Mute Cradle Assembly

## TD6309XX-5 | 5 Bay Auto Mute Cradle Assembly w/ Charger



### Package Contents:

#### TDX309XX-5 | 5 Bay Auto Mute Cradle Assembly

Part Description	Qty.
Cradle assembly	5
Stainless steel stand	1
M4 x 0.7, pan head, #2 Philips drive, 8mm lg.	25
M4 Star washer, external teeth	25
Pressure sensitive adhesive	12
Five-to-one cable splitter	1

#### TD6309XX-5 | 5 Bay Auto Mute Cradle Assembly w/ Charger

Part Description	Qty.
TDX309XX-5 (same as above)	1
USB charger, high power, 6 port	1

Tools needed for assembly: #2 Philips head screwdriver

### Assembly Instruction Steps:

1. If you will mount the charger assembly using screws (not included), use the stainless steel stand as a template to mark the mounting holes. If you are mounting using the Pressure Sensitive Adhesive (PSA) pads (included), disregard this step.
2. Remove protective covering from the stainless steel stand.
3. Feed each cable thru its corresponding rectangular opening as shown, see Figure 1.
4. Fasten each cradle to the stand with the screws and washers provided. Apply medium torque – Do not overtighten, see Figure 2.
5. Attach the charger assembly to the desired surface using desired hardware (not included). If using PSA pads, go to Step 6.
6. Clean the stainless steel stand with alcohol or similar and allow to dry completely. Position the 12 PSA pads in the approximate locations shown, see Figure 3.
7. Clean the mating mounting surface with alcohol or similar and allow to dry completely.
8. Remove the red protective cover from each PSA pad and carefully bring them into contact with the mating mounting surface. Apply medium force pressure for 60 seconds. Do not handle the assembly for 24 hours to allow the PSA to fully cure.
9. After 24 hours, attach each leg of the five-to-one cable splitter to each of the five 5.5mm female connectors.
10. Plug the USB A male connector of the cable splitter into the charging power source.
11. Slide the speaker mic into the cradle until the belt clip snaps into place. Note, the speaker mic receive audio (Rx) is disabled when installed in the charger - No sound will be heard from the speaker mic while it is installed in the charger.

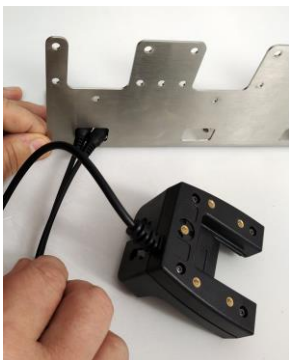


Figure 1

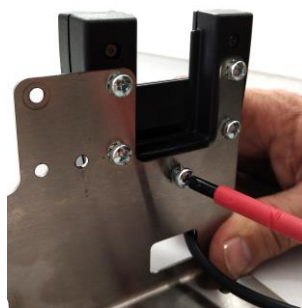


Figure 2



Figure 3



#### Safety Precautions

Ensure you follow and comply with all applicable local building and electrical codes in any installation of this product.

Stone Mountain, Ltd. is not responsible for any damages or loss resulting from non-compliant or improper installation of this product.



#### Contact Us:

(540) 297-6434

info-us@stonemountainltd.com

www.stonemountainltd.com

Huddleston, VA 24104 USA