


Thank you for your purchase of the **FasN™ Device Connector Retention System**. Used correctly with your **PHOENIX Elite** speaker microphone, the patent pending **FasN™ System** eliminates:

- Accidental Device (Smartphone/Tablet) connector disengagement.
- Damage to the Device connector.
- Loss of the Device.

In order to get the most from your new **FasN™ System**, it is important that you understand its proper installation and use. Below are brief descriptions and pictures showing the “**Correct**” and “**Incorrect**” way to install and use your **FasN™ System**.

Note: Improper installation could cause damage to the Device and/or the speaker mic connector/cable. Damage resulting from incorrect installation and/or use is not covered under warranty.

Correct installation and use shown below. Note the **Hook** component and the **Loop** component are positioned on the cable portion, **NOT** on the cable strain relief. Position both components accordingly, remove the protective cover from the **Hook** component and firmly press it onto the Device and hold for one (1) minute. Attach the **Loop** component to the cable and engage to the **Hook** component. Ensure the cable is **parallel to the top of the Device** – Do **NOT** pull down on the **Loop** when engaging to the **Hook** such that it pulls the cable toward the Device.

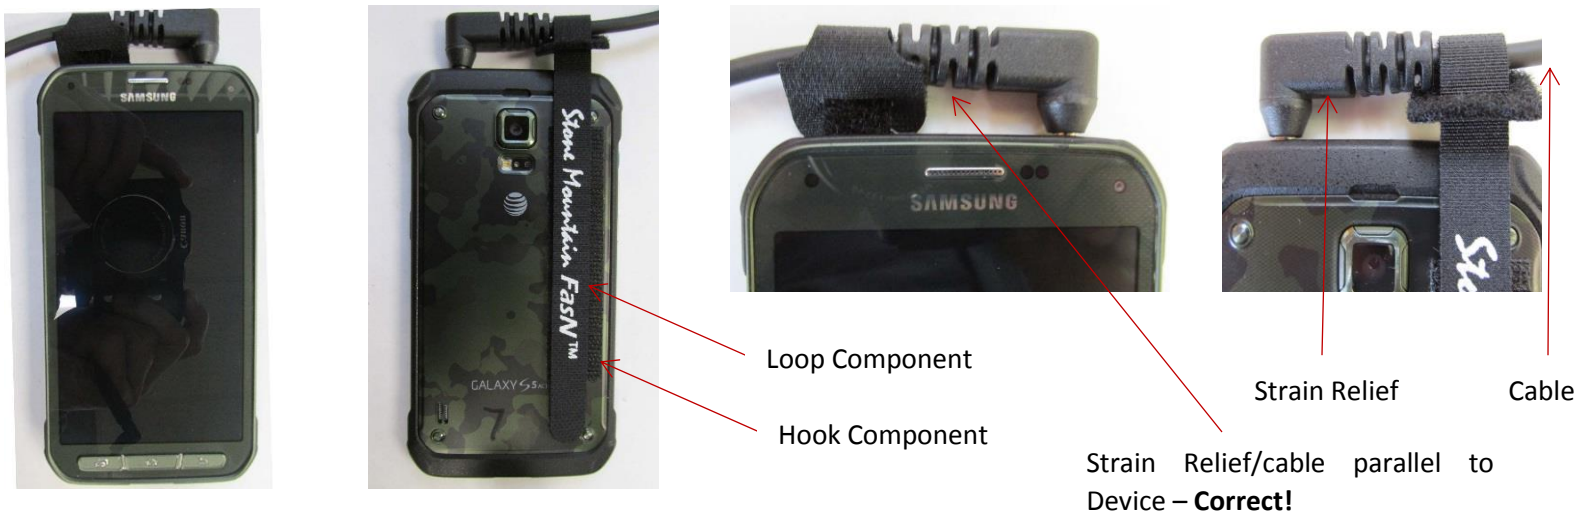

Incorrect installation and use shown to the right. Note the **Loop** component has been pulled downward with enough force that when engaged to the **Hook** component the cable is bent downward toward the Device. Doing so will result in excessive force applied to the speaker mic and possibly the Device 3.5mm connector interface. Damage to the cable and/or Device connectors or solder joints can result in permanent loss of PTT, Rx audio and/or Tx audio functionality.

Strain relief and cable bending downward toward Device – **Incorrect!**

